

Registering Expressions in ActivInspire

Plug in the Activhub


The Activhub is needed to communicate between Activexpression devices and your computer.

Insert the Activhub into a USB socket on your PC. Use the holder and the 1.8m (6ft) USB extension cable if necessary.

A green light will flash to show the Activhub is working.



Open the Browsers and select the Voting Browser

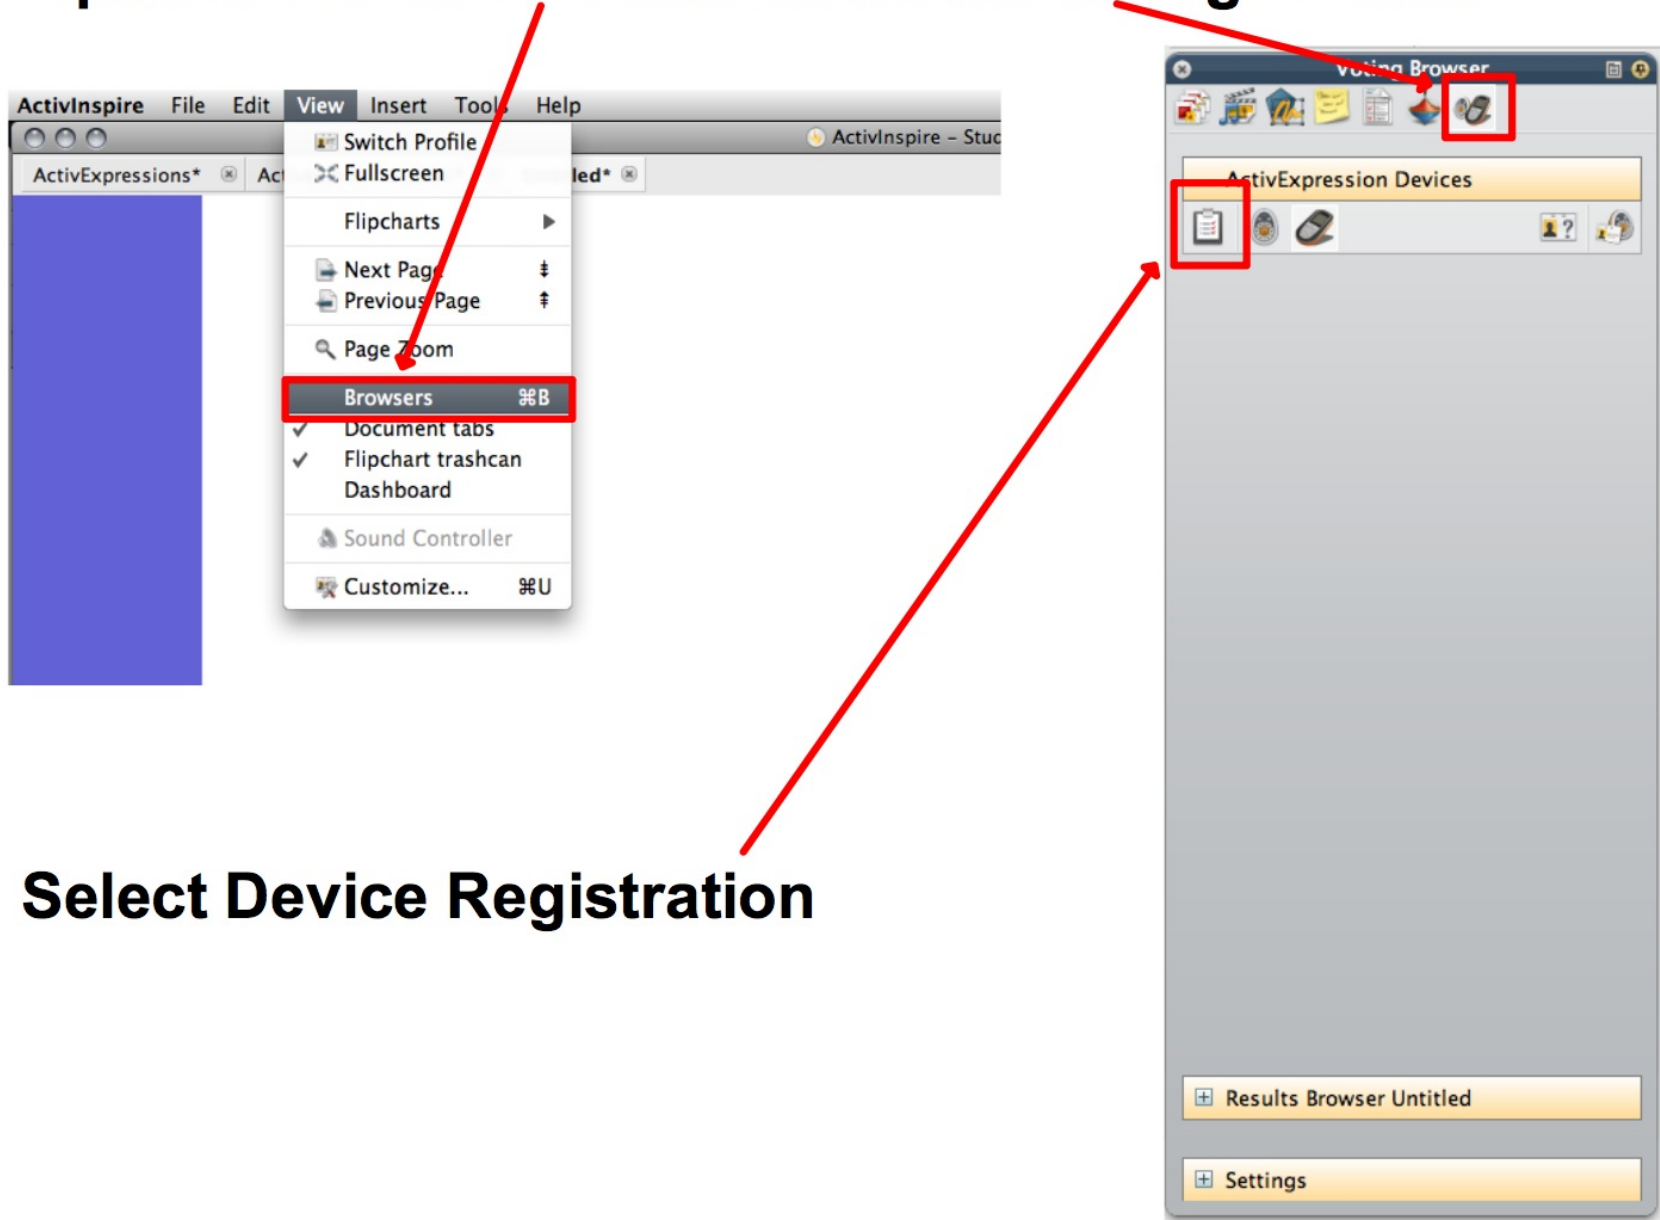

Select Device Registration


On the Device Registration Screen, select the ActivHub, then ActivExpressions. Click the Register button.



**Select the # of devices to be registered.
Checking the Allow Expression end user naming box
allows the students to create a name for the device. Keep
the box unchecked to name devices numerically.**

The screenshot shows a dialog box titled "Device Registration" with a blue header bar containing a help icon and a close button. The main content area has a title "Device Registration" and a subtitle "Please follow the instructions below to register your ActivExpression devices". Below this, there is a prompt "Please choose the number of ActivExpression devices you would like to register" followed by a spinner box set to "1". A section titled "Allow Expression end user naming" is enclosed in a rounded rectangle and contains a dropdown menu set to "Any Characters", a "Maximum Name Length" spinner box set to "14", and an unchecked checkbox labeled "Force Name Length". At the bottom right, there are two buttons: "Next >" and "Cancel".

8. Follow the directions that appear in the device registration window

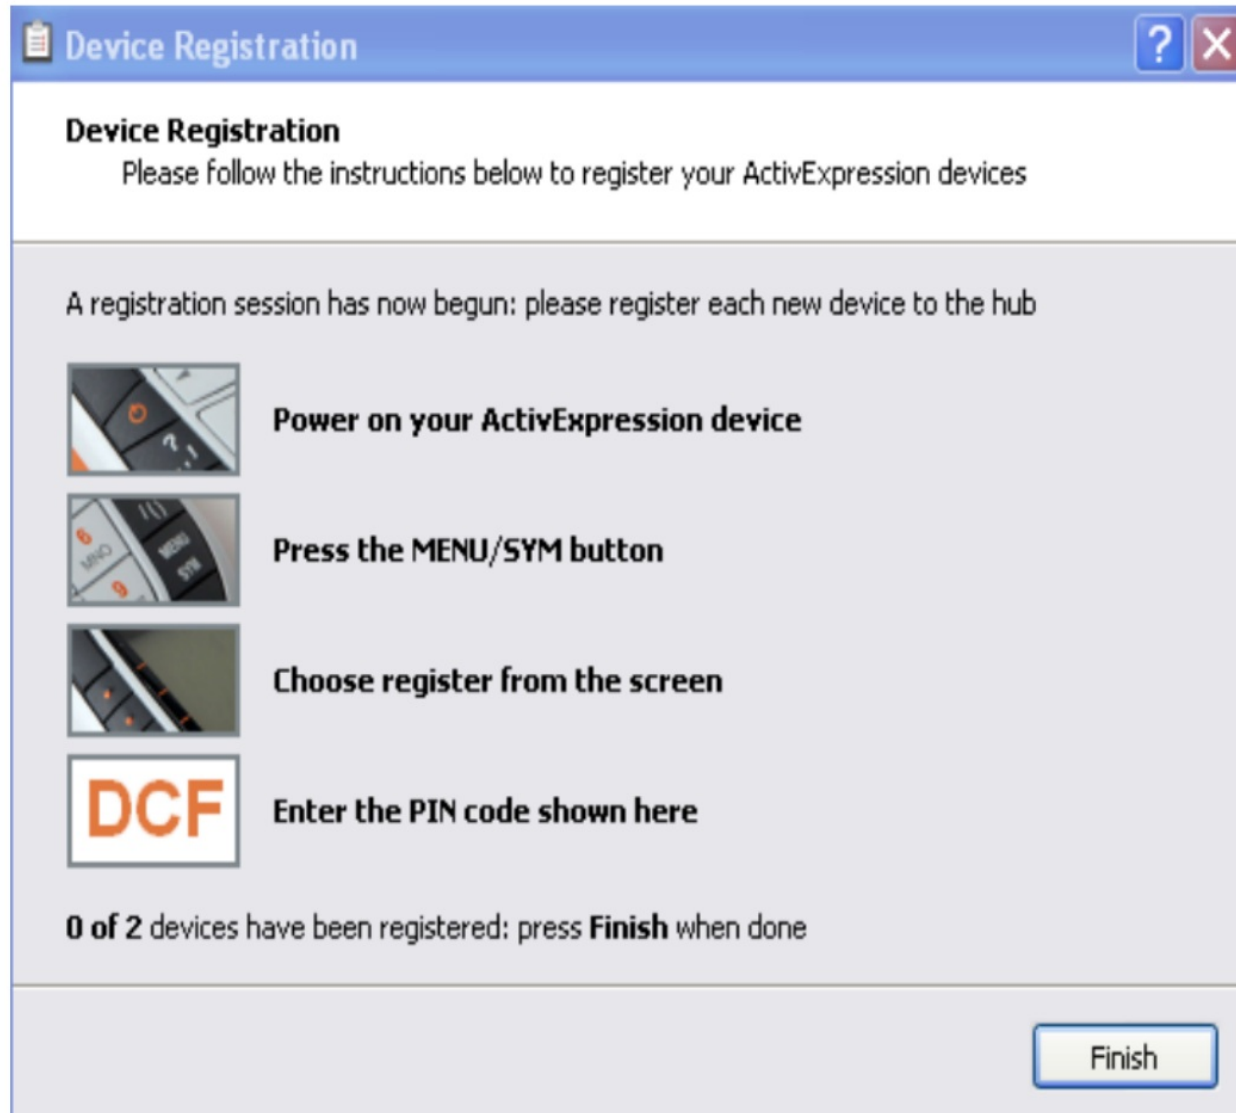

Click on Rename and enter in a Prefix (up to 12 characters) to give a name to the devices. They will be named numerically.

