

# Registering Activotes in ActivInspire

## Plug in the Activhub


The Activhub is needed to communicate between Activexpression devices and your computer.

Insert the Activhub into a USB socket on your PC. Use the holder and the 1.8m (6ft) USB extension cable if necessary.

A green light will flash to show the Activhub is working.




# Open the Browsers and select the Voting Browser

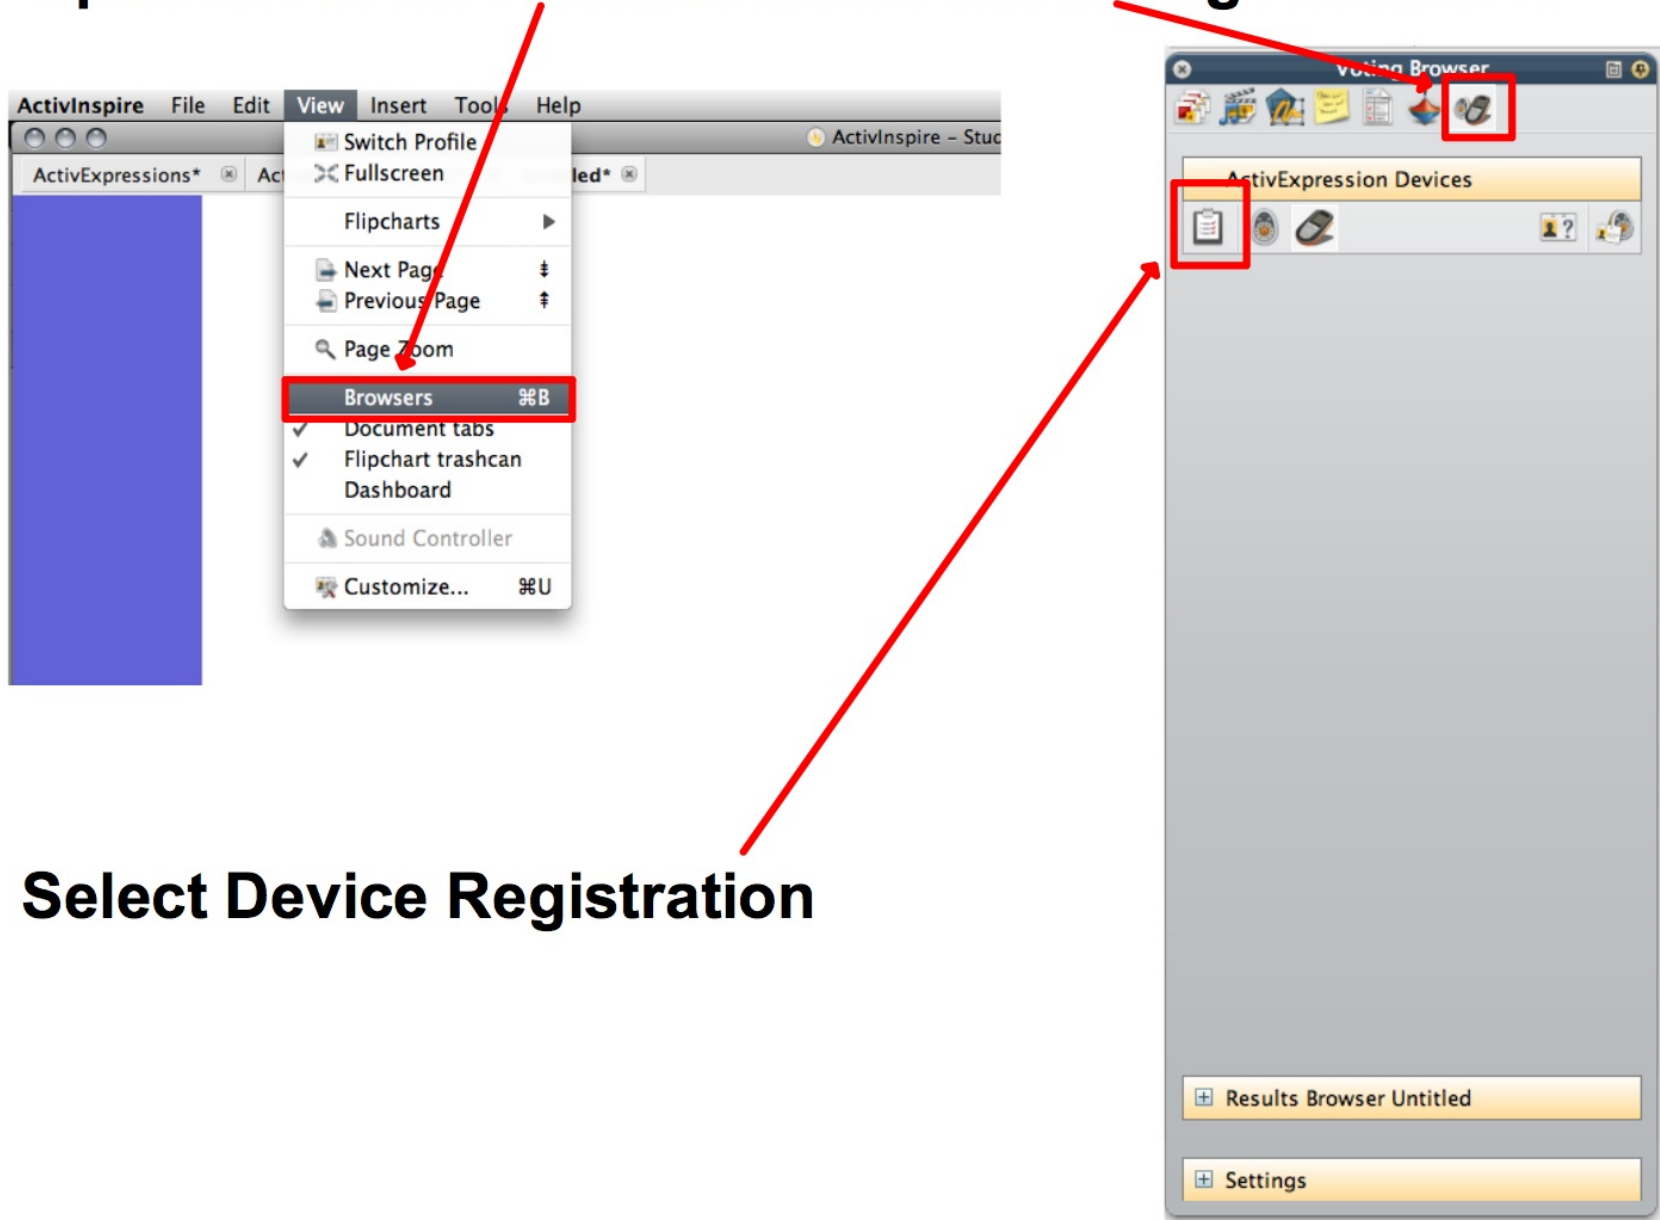


## Select Device Registration

**On the Device Registration Screen, select the ActivHub, then Activotes. Click the Register button.**

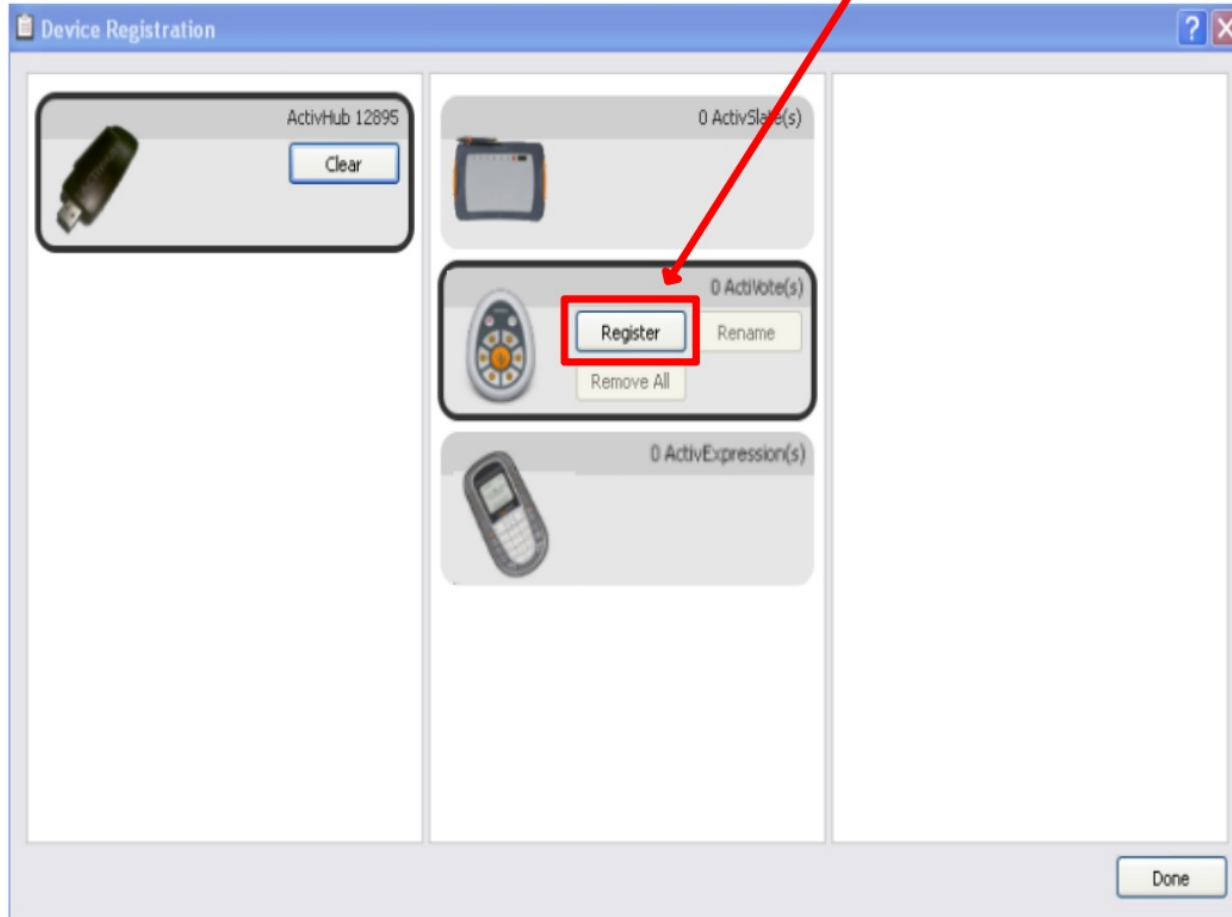

**Select the # of devices to be registered.  
Follow the directions in the Device Registration window  
to register the devices.**

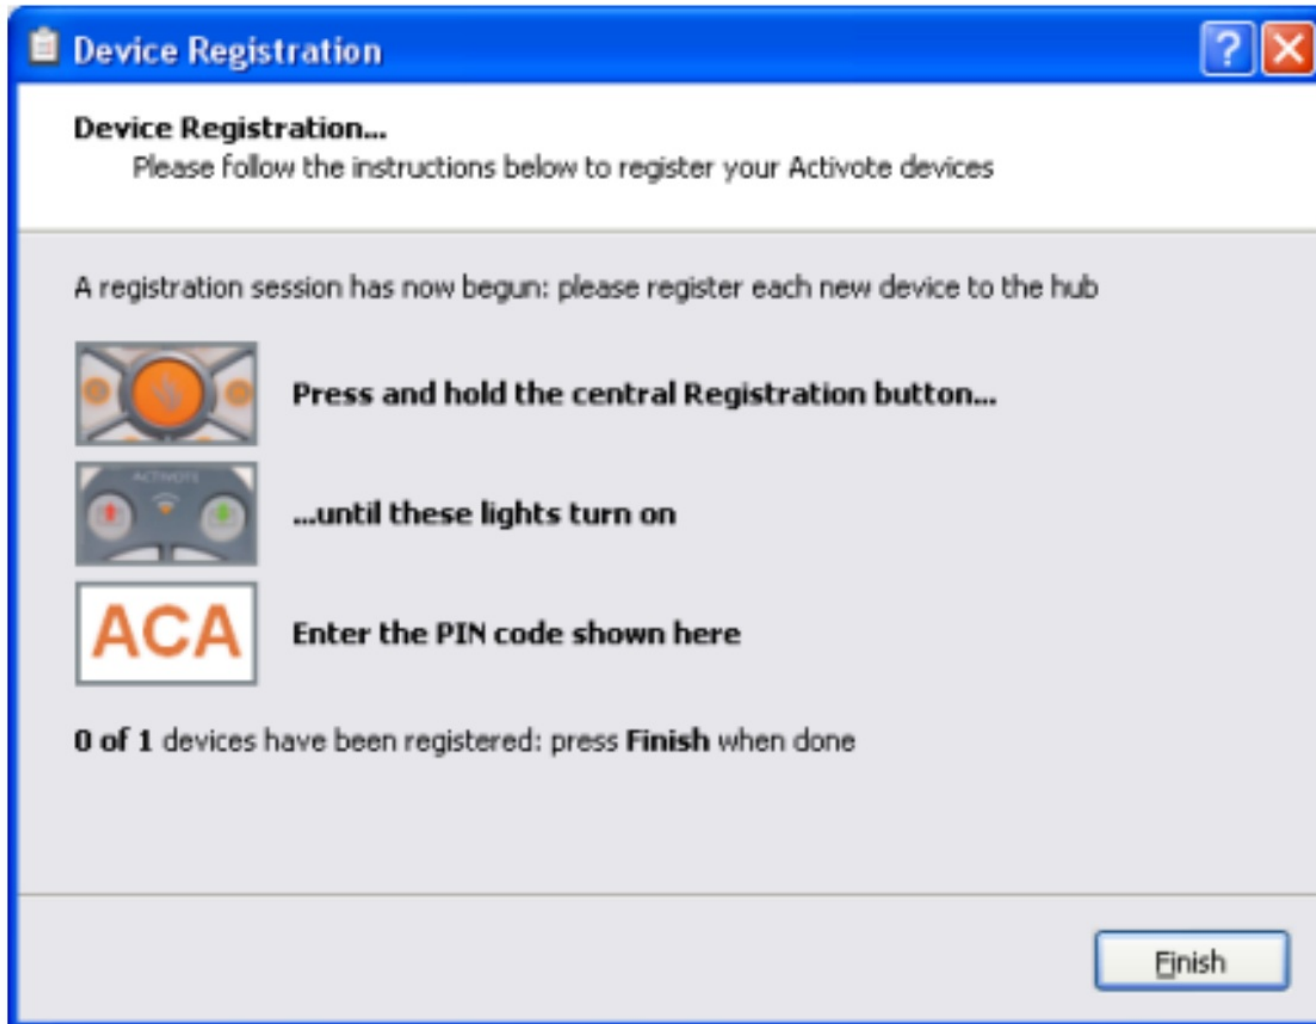

**Click on Rename and enter in a prefix to give a name to the devices. They will be named numerically.**

